



Preferences in system mode DJ44 V01.00' (for further information see manual)

Default FX slots

Default decks

LED bar mode
select by browse encoder

- led 8 = clock blinking
- led 7 = fader position (point)
- led 6 = fader position (bar)
- led 5 = track position
- led 4 = free
- led 3 = master level
- led 2 = post fader level
- led 1 = pre fader level

!!! modes 1 to 5 work only with traktor !!!

EQ mode

- off = center value 63 - 64 (standard)
- lit = center value 108 (ableton live EQ three)

Filter mode

- off = standard
- lit = center spreaded scale for traktor
- blink = double command to control two filters in ableton live

Encoder mode

- off = absolute mode
- lit = relative mode

Default hotcue/clip banks

- 1 - 4 on = first bank
- 5 - 8 on = second bank



Display scale

- 0 = off
- 1 = default 00 to 99 %
- 2 = bipolar -99 to +99 %
- 3 = loop size (traktor)
- 4 = move size (traktor)
- 5 = move mode (traktor)
- 6 = key (traktor)
- 7 = sample length (traktor remix)
- 8 = pitch (traktor)
- 9 = direct 00 to 99
- 10 = beat repeat grid (live)

independent scale with shift

Key mode

- off = all keys work as momentary with CC commands
- lit = all led keys work as toggle keys CC commands
- blink = all keys work as momentary with note commands

system mode

press and hold both encoders to enter / leave system mode

- off = application runs
- lit = system mode active

Global controls

- off = global controls send on midi channel 1
- lit = global controls send on midi channel 2

Select setup 1 - 4 (1 for traktor / 4 for live)
Reset setup 1 - 4 to factory settings

Shift key

Pot mode

- off = deck & fx pots have same commands independent from deck/slot-select and shift
- lit = deck & fx pots have different commands depending on deck/slot-select and shift

