

Live 8 setup 'faderfox FT3 V01.als'

FX 1 FX 2 FX 3 FX 4 pot / switch	Beat repeat: Intervall / repeat Flanger: dry wet Vinyl distortion: drive / tracing on-off Delay: send level / delay on-off	Beat repeat: offset / no triplets Flanger: delay time V.distortion: frequency / pinch on-off Delay: beat division / freeze on-off	Beat repeat: grid / variation mode Flanger: feedback / + V.distortion: width / pinch hard-soft Reverb: size / reverb on-off	Beat repeat: variation / output mode Flanger: LFO amount / LFO shape Vinyl distortion: global drive Reverb: decay time / freeze on-off
Deck	Global quantization	Clip Transpose (one note per click) Clip gain	Loop start Clip start point	Loop length Clip end point
Global	Tempo coarse Push to tempo nudge down Master Compressor: threshold Push to switch on/off the compressor	Tempo fine Push to tempo nudge up Master Compressor: ratio Push to choose envelope mode	Monitor volume Push to tap tempo Master Compressor: knee Push to choose model type	Master volume Push to switch on/off metronome Master Compressor: output gain Push to switch on/off makeup gain

Select functions of the upper four multifunctional encoders (indicated by 6 green leds)

Selects a track (indicated by red leds)
 Press both Sel C & D buttons and hold for about 1 second to enter/leave system mode


Activates 4-filter-mode assigning filters of all decks to the four EQ-encoders
Start playback

Activates 4-EQ-low-mode assigning low EQ's of all decks to the four EQ-encoders
Stop playback

Track volume

Crossfader

Launch selected clip
Mute

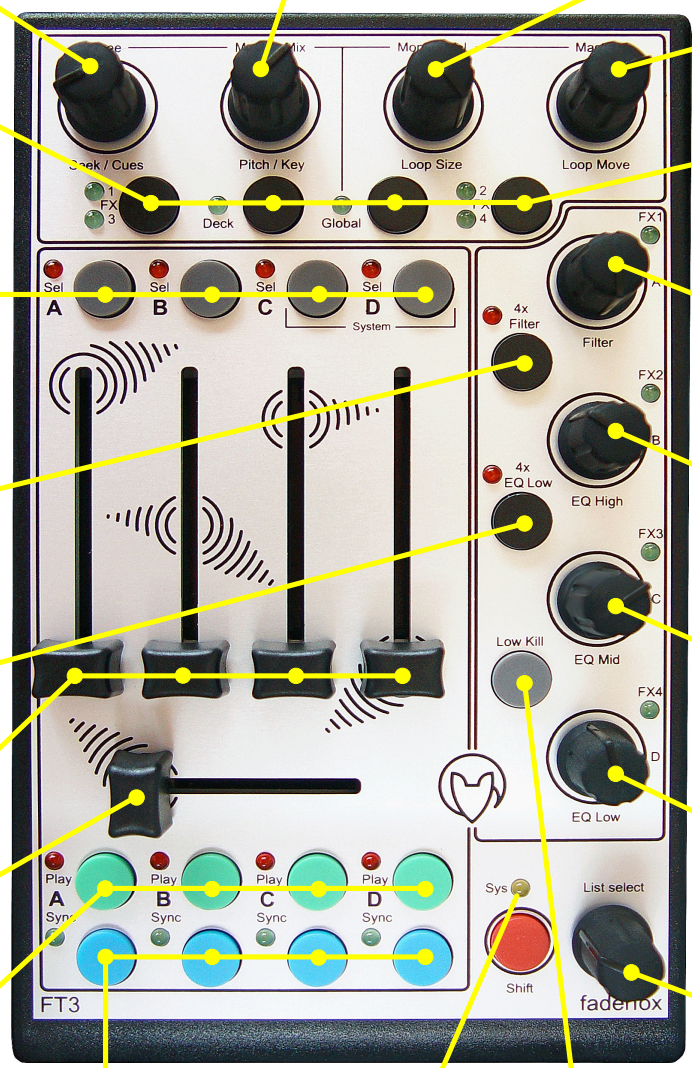

FX 1 / 3 button:
 Deck button:
 Global button: Master select
 FX 4 button: Delay/reverb select

Filter frequency
 Push to activate/deactivate filter (indicated by FX1 led)
 Filter resonance
 Push to switch on/off beat repeat (indicated by FX1 led)

EQ High
 Push to center EQ (active EQ indicated by FX2 led)
 EQ high frequency
 Push to switch on/off flanger (indicated by FX2 led)

EQ Mid (high)
 Push to center EQ (active EQ indicated by FX3 led)
 Filter LFO modulation amount
 Push to switch on/off vinyl distortion (indicated by FX3 led)

EQ Low
 Push to center EQ (active EQ indicated by FX4 led)
 EQ low frequency
 Push to switch on/off delay-reverb (indicated by FX4 led)

Scene selection up/down
 Push to start highlighted scene

Stop current playing clip
Solo / Cue

Low kill switch
Choose filter types

Sys led
 lit = system mode is active
 blinks = controller isn't recognized

! Hold shift button for 2nd functions written on yellow (light gray) background