

Traktor Pro setup 'faderfox FT3 V01.tsi'

FX 1 / 3 FX 2 / 4	Dry / wet Push to switch on/off FX (advanced) FX Select (advanced) Push to toggle advance / chained mode	FX parameter 1 or FX1 amount Push for FX reset (advanced) or to switch on/off FX1 (chained) FX1 Select (chained)	FX parameter 2 or FX2 amount Push for FX button 1 (advanced) or to switch on/off FX2 (chained) FX2 Select (chained)	FX parameter 3 or FX3 amount Push for FX button 2 (advanced) or to switch on/off FX3 (chained) FX3 Select (chained) Push for effect settings snapshot
Deck	Seek in deck Hold down and turn to scratch Cue point select Push to set a cue point	Key control (one note per click) Push to reset key Pitching (tempo) Push to delete the selected cue point	Loop size Push to switch on/off loop Push to set loop-in-point	Loop move Push to reset loop size to 1 Loop move size Push to set loop-out-point
Global	Browse thru tree Push to expand/collapse tree Favorites select	Monitor mix	Monitor volume	Master volume

Select functions of upper four multifunctional encoders (indicated by 6 green leds)

Selects a deck (indicated by red leds)
 Press both Sel A & B buttons to get traktors monitor state
 Press both Sel C & D buttons and hold for about 1 second to enter/leave system mode

Activates 4-filter-mode assigning filters of all decks to the four EQ-encoders
Bend forward

Activates 4-EQ-low-mode assigning low EQ's of all decks to the four EQ-encoders
Bend backward

Deck volume of deck A to D


Crossfader

Play / pause (indicated by red leds)
Prelisten (indicated by red leds)

Sync (indicated by green leds)
Master sync (indicated by green leds)

Low kill switch
High kill switch

Sys led
 lit = system mode is active
 blinks = controller isn't recognized

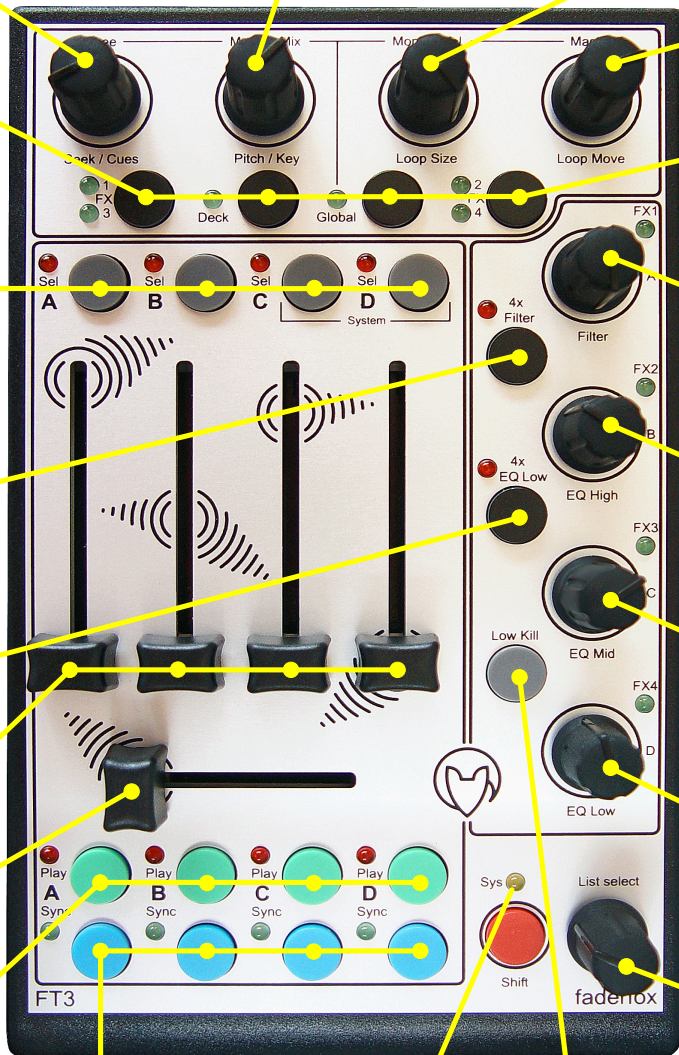

FX 1 / 3 button: Snap
 Deck button: Quantize
 Global button: LFO reset
 FX 2 / 4 button: Maximize browser

Filter frequency
 Push to activate/deactivate filter (indicated by FX1 led)
 Push to assign deck to FX slot 1 (indicated by FX1 led)

EQ High
 Push to center EQ (active EQ indicated by FX2 led)
Gain
 Push to assign deck to FX slot 2 (indicated by FX2 led)

EQ Mid (high)
 Push to center the EQ (active EQ indicated by FX3 led)
EQ Mid (low)
 Push to assign deck to FX slot 3 (indicated by FX3 led)

EQ Low
 Push to center EQ (active EQ indicated by FX4 led)
Pan
 Push to assign deck to FX slot 4 (indicated by FX4 led)

Browse thru track list
 Push to load selected track into selected deck
Seek in preview player
 Push to load and play/stop preview player

! Hold shift button for 2nd functions written on yellow (light gray) background